

# SAS CONTROL MODULE REMOVAL/INSTALLATION

B3E081057030W01


## Warning

- Handling the SAS control module improperly can accidentally deploy the air bag modules and pre-tensioner seat belt, which may seriously injure you. Read the service warnings and cautions before handling the air bag module. (See [SERVICE WARNINGS](#).) (See [SERVICE CAUTIONS](#).)

## Caution

- Handling the SAS control module improperly can accidentally deploy the air bag modules and pre-tensioner seat belt, which may seriously injure you. If configuration is not completed before removing the SAS control module, DTC B2477 will be displayed.

1. Perform SAS control module configuration when replacing it. (See [SAS CONTROL MODULE CONFIGURATIONS](#).)
2. Turn the ignition switch to the LOCK position.
3. Disconnect the negative battery cable and wait for **1 min or more**.
4. Remove the console. (See [CONSOLE REMOVAL/INSTALLATION](#).)
5. Remove in the order indicated in the table.

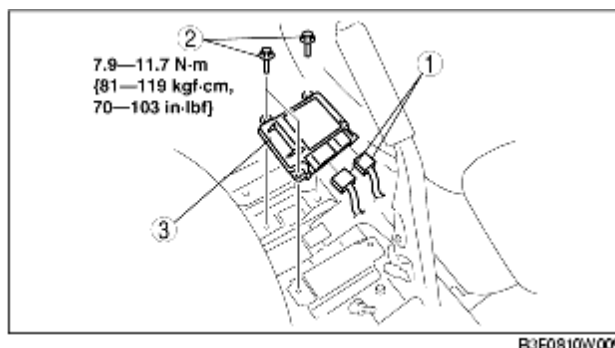

1	Connector
2	Bolt
3	SAS control module

6. Install in the reverse order of removal.
7. Turn the ignition switch to the ON position.
  - If the SAS control module is replaced, turn the ignition switch to the ON position for **20 s or more** after completing the configuration.
8. Verify that the air bag system warning light illuminates for **approx. 6 s** and goes out.
  - If the air bag system warning light does not operate normally, refer to the on-board diagnostic system (air bag system) and perform inspection of the system.