



## REAR DOOR TRIM REMOVAL/INSTALLATION

B3E09176852YW01

1. Disconnect the negative battery cable. (vehicle with power window system)
2. Using a small flathead screwdriver, open the cap and remove the screw, then remove the inner handle cover.

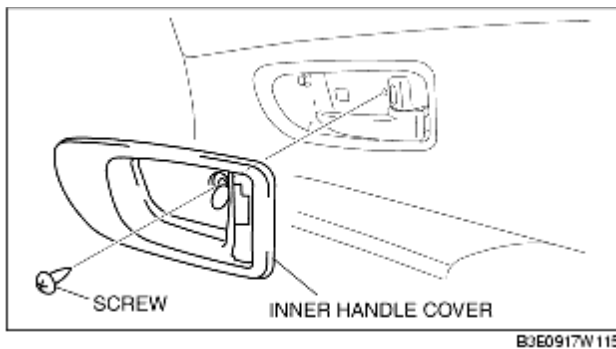

3. Remove the sail garnish. (5HB) (See [SAIL GARNISH REMOVAL/INSTALLATION.](#))
4. Remove the regulator handle. (vehicle without power window system) (See [REGULATOR HANDLE REMOVAL.](#)) (See [REGULATOR HANDLE INSTALLATION.](#))
5. Using a small flathead screwdriver, open the cap and remove the screw.

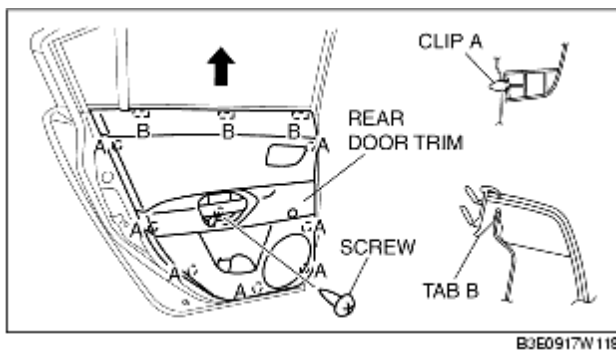

6. Detach clips A from the front door using a fastener remover.
7. Pull the rear door trim upward and detach tabs B from the rear door.
8. Disconnect the power window subswitch connector. (vehicle with power window system)
9. Remove the rear door trim.
10. Install in the reverse order of removal.