


INSTRUMENT CLUSTER STRUCTURAL VIEW

B3E092255430T03


Meter And Gauge

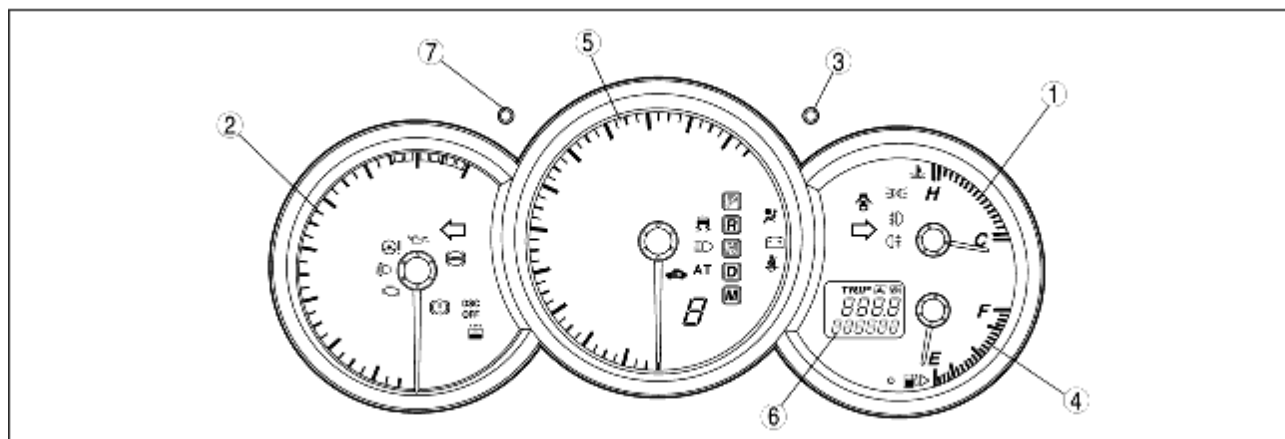

B3E09 22T005

1	Water temperature gauge
2	Tachometer
3	Tripmeter switch
4	Fuel gauge
5	Speedometer
6	Odometer/tripmeter
7	Dimmer switch

Warning And Indicator Light

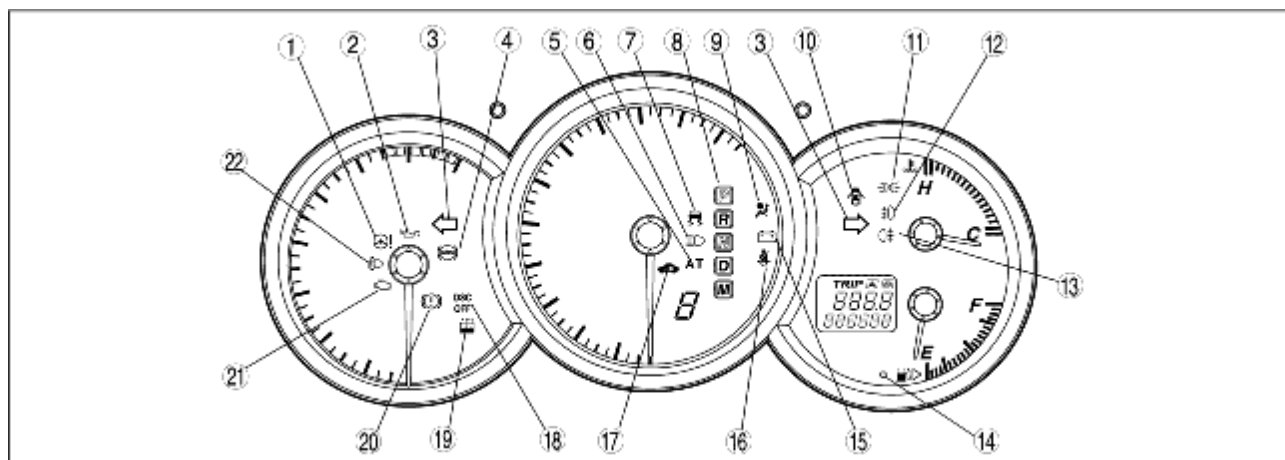

B3E09 22T006

×: Applicable

No.	Warning and indicator light	Input signal source	CAN system	Note

1	EHPAS warning light	EHPAS control module	x	-
2	Oil pressure warning light	Oil pressure switch	-	-
3	Turn indicator light	PJB	x	-
4	ABS warning light	• DSC HU/CM • ABS HU/CM	x	-
5	AT warning light	PCM	x	ATX
6	High-beam indicator light	PJB	x	-
7	DSC indicator light	DSC HU/CM	x	-
8	Selector indicator light	PCM	x	ATX
9	Air bag system warning light	SAS unit	x	-
10	Door ajar warning light	PJB	x	-
11	TNS indicator light	TNS relay	-	-
12	Front fog indicator light	Front fog light relay	-	-
13	Rear fog indicator light	Rear fog light relay	-	-
14	Fuel-level warning light	Fuel gauge sender unit	-	-
15	Generator warning light	PCM	x	-
16	Seat belt warning light	SAS unit	x	-
17	Security light	-	-	-
18	DSC OFF light	DSC HU/CM	x	-
19	Washer fluid level warning light	Washer fluid level sensor	-	-
20	Brake system warning light	• DSC HU/CM • ABS HU/CM	x	-
21	MIL	PCM	x	-
22	Headlight auto leveling warning light	Auto leveling control module	-	With discharge headlight