



PASSENGER JUNCTION BOX (PJB) WIRING DIAGRAM

B3E094001072T03

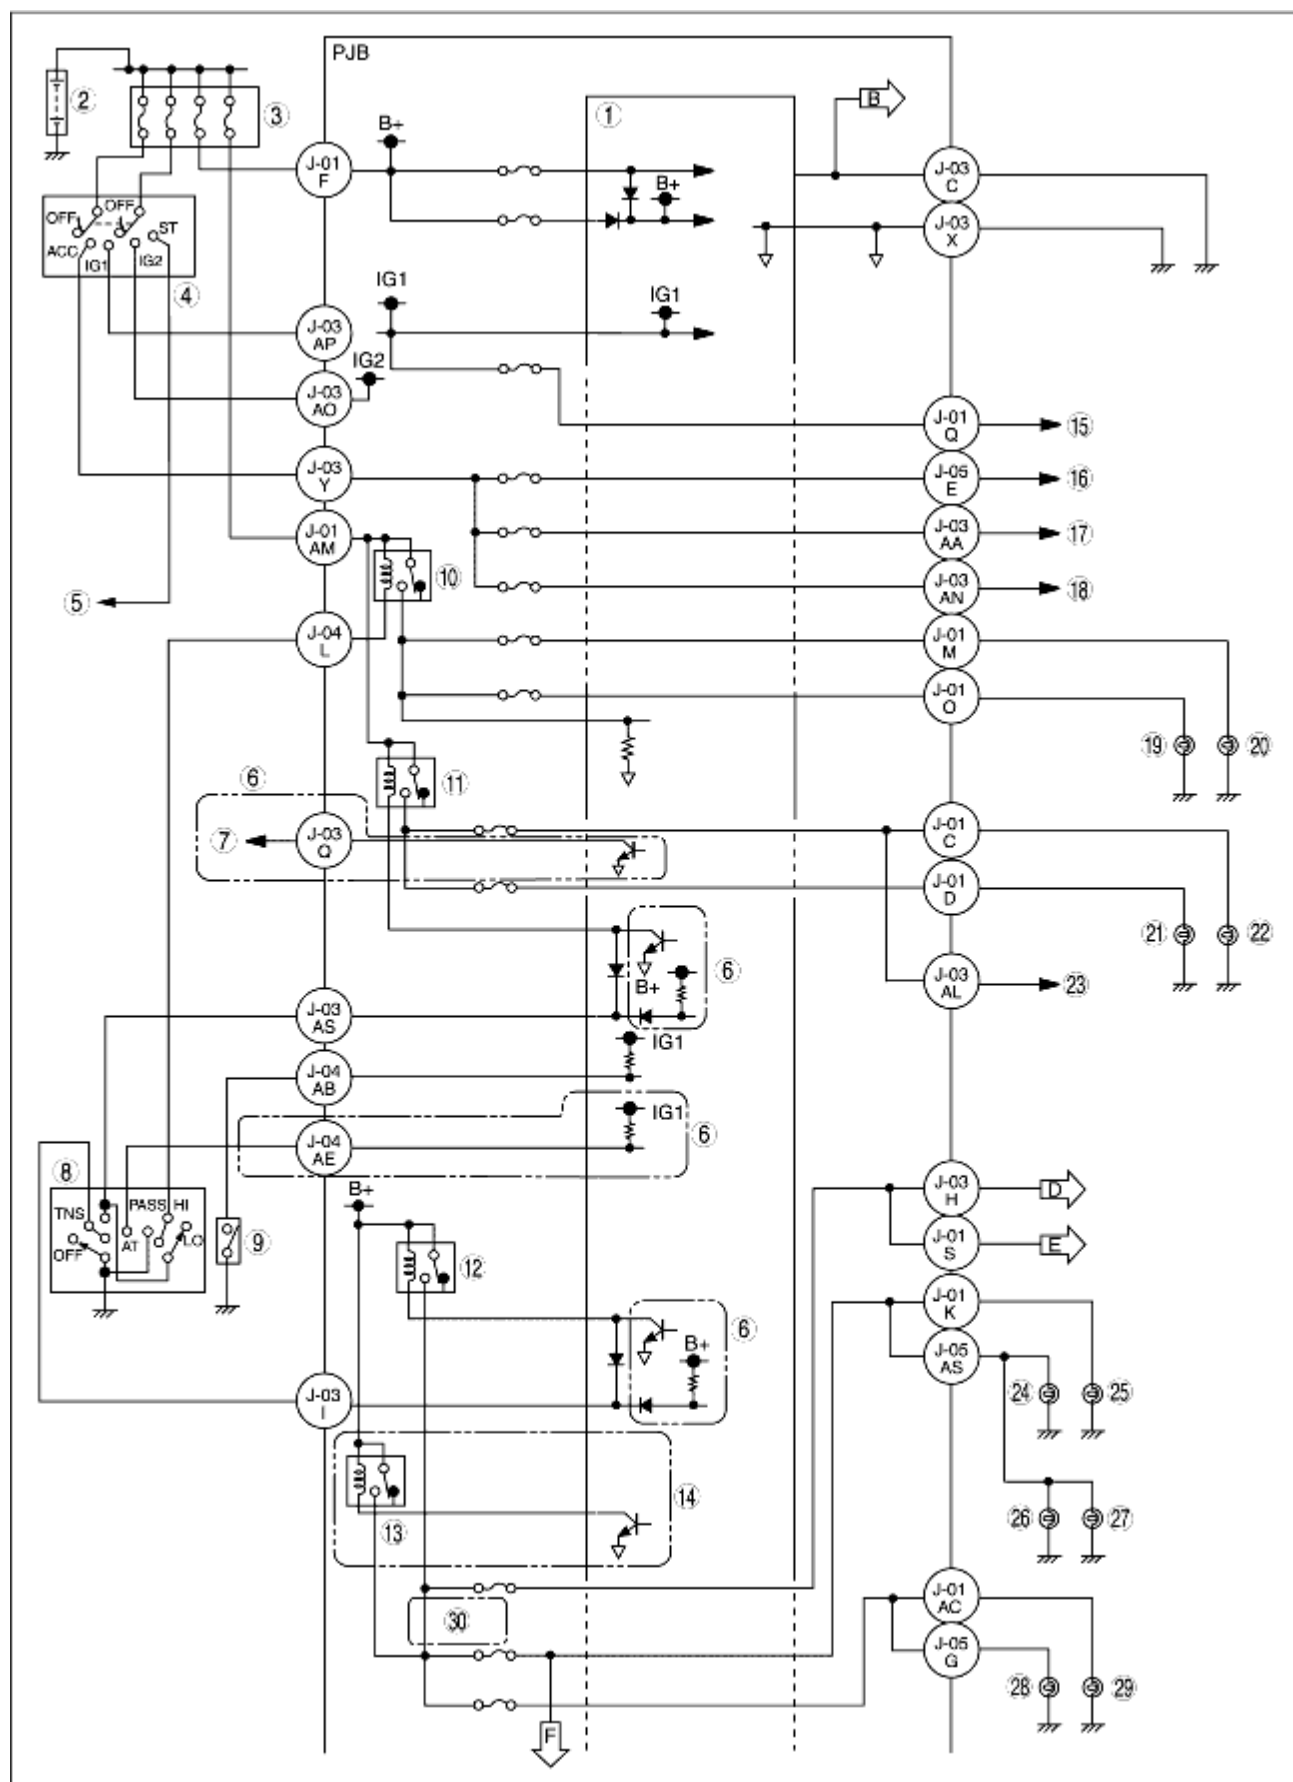

B3E0940T102

1	Microcomputer
2	Battery
3	Main fuse block
4	Ignition switch
5	To starting system
6	With headlight auto leveling system
7	Auto leveling control unit
8	Light switch
9	Parking brake switch
10	Headlight HI relay
11	Headlight LO relay
12	TNS relay
13	Running light relay
14	With running light system
15	To main fuse block
16	Power outer mirror
17	To audio unit, keyless control module, car-navigation unit
18	Cigarette lighter
19	Headlight (LH) (high beam)
20	Headlight (RH) (high beam)
21	Headlight (LH) (low beam)
22	Headlight (RH) (low beam)
23	To headlight leveling switch
24	Taillight (RH)
25	Parking light (RH)
26	License plate light (LH)
27	License plate light (RH)
28	Taillight (LH)
29	Parking light (LH)
30	Without running light system

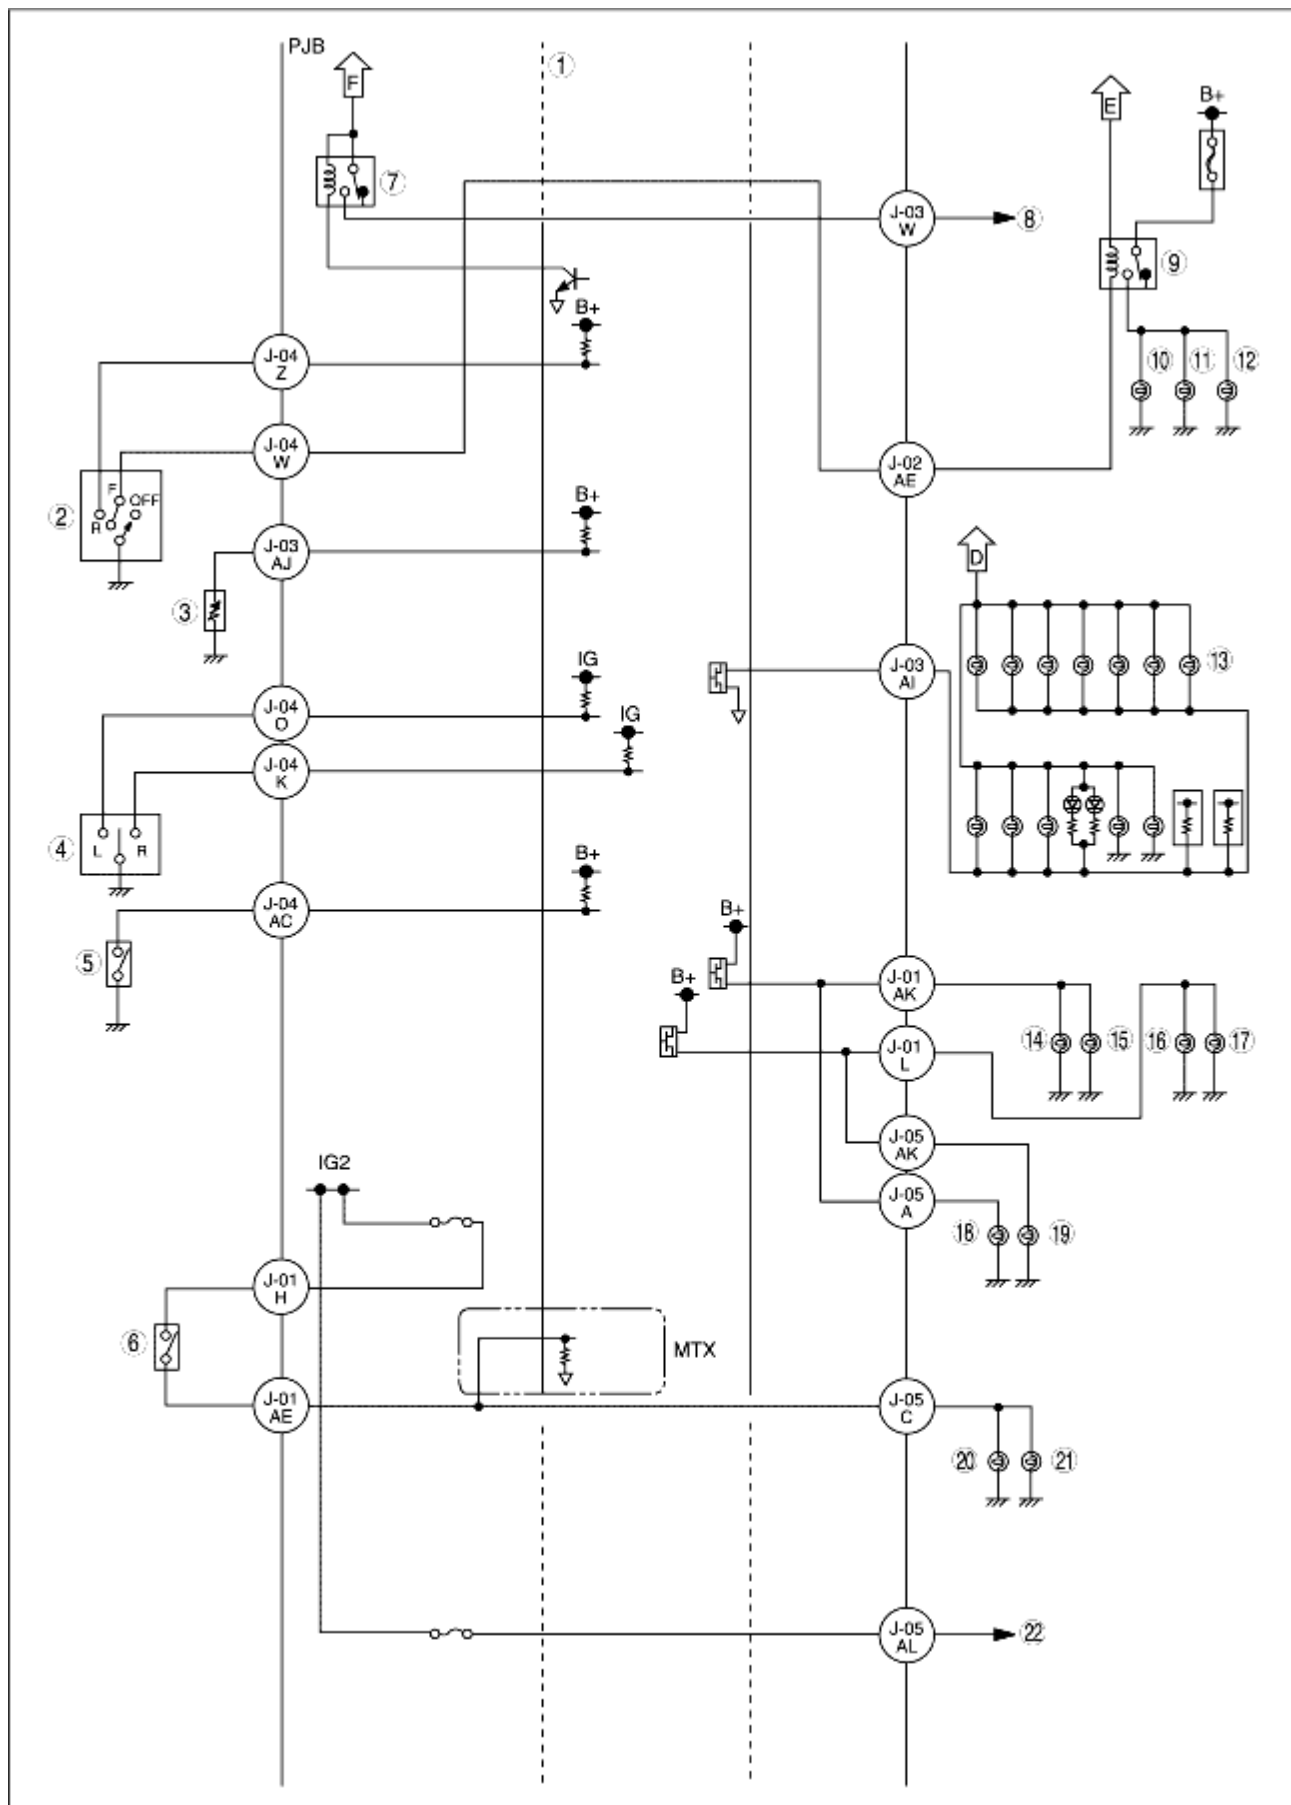


B3E0940T103

1	Microcomputer
2	Fog light switch
3	Panel light control switch
4	Turn switch
5	Hazard warning switch
6	Back-up light switch
7	Rear fog light relay
8	Rear fog light
9	Front fog light relay
10	Front fog light (LH)
11	Front fog light (RH)
12	Front fog indicator light
13	Illumination lights
14	Front turn light (LH)
15	Side turn light (LH)
16	Front turn light (RH)
17	Side turn light (RH)
18	Rear turn light (LH)
19	Rear turn light (RH)
20	Back-up light (LH)
21	Back-up light (RH)
22	To sunroof




1	Microcomputer
2	Horn relay
3	Horn switch
4	Horn
5	Brake switch
6	To brake light
7	Brake light
8	To instrument cluster
9	Rear window defroster relay
10	Blower relay
11	To blower motor
12	Heated outer mirror filament (LH)
13	Heated outer mirror filament (RH)
14	Rear window defroster
15	Climate control unit
16	Without full-auto air conditioner system
17	Seat warmer unit
18	To PCM
19	To instrument cluster
20	TR switch

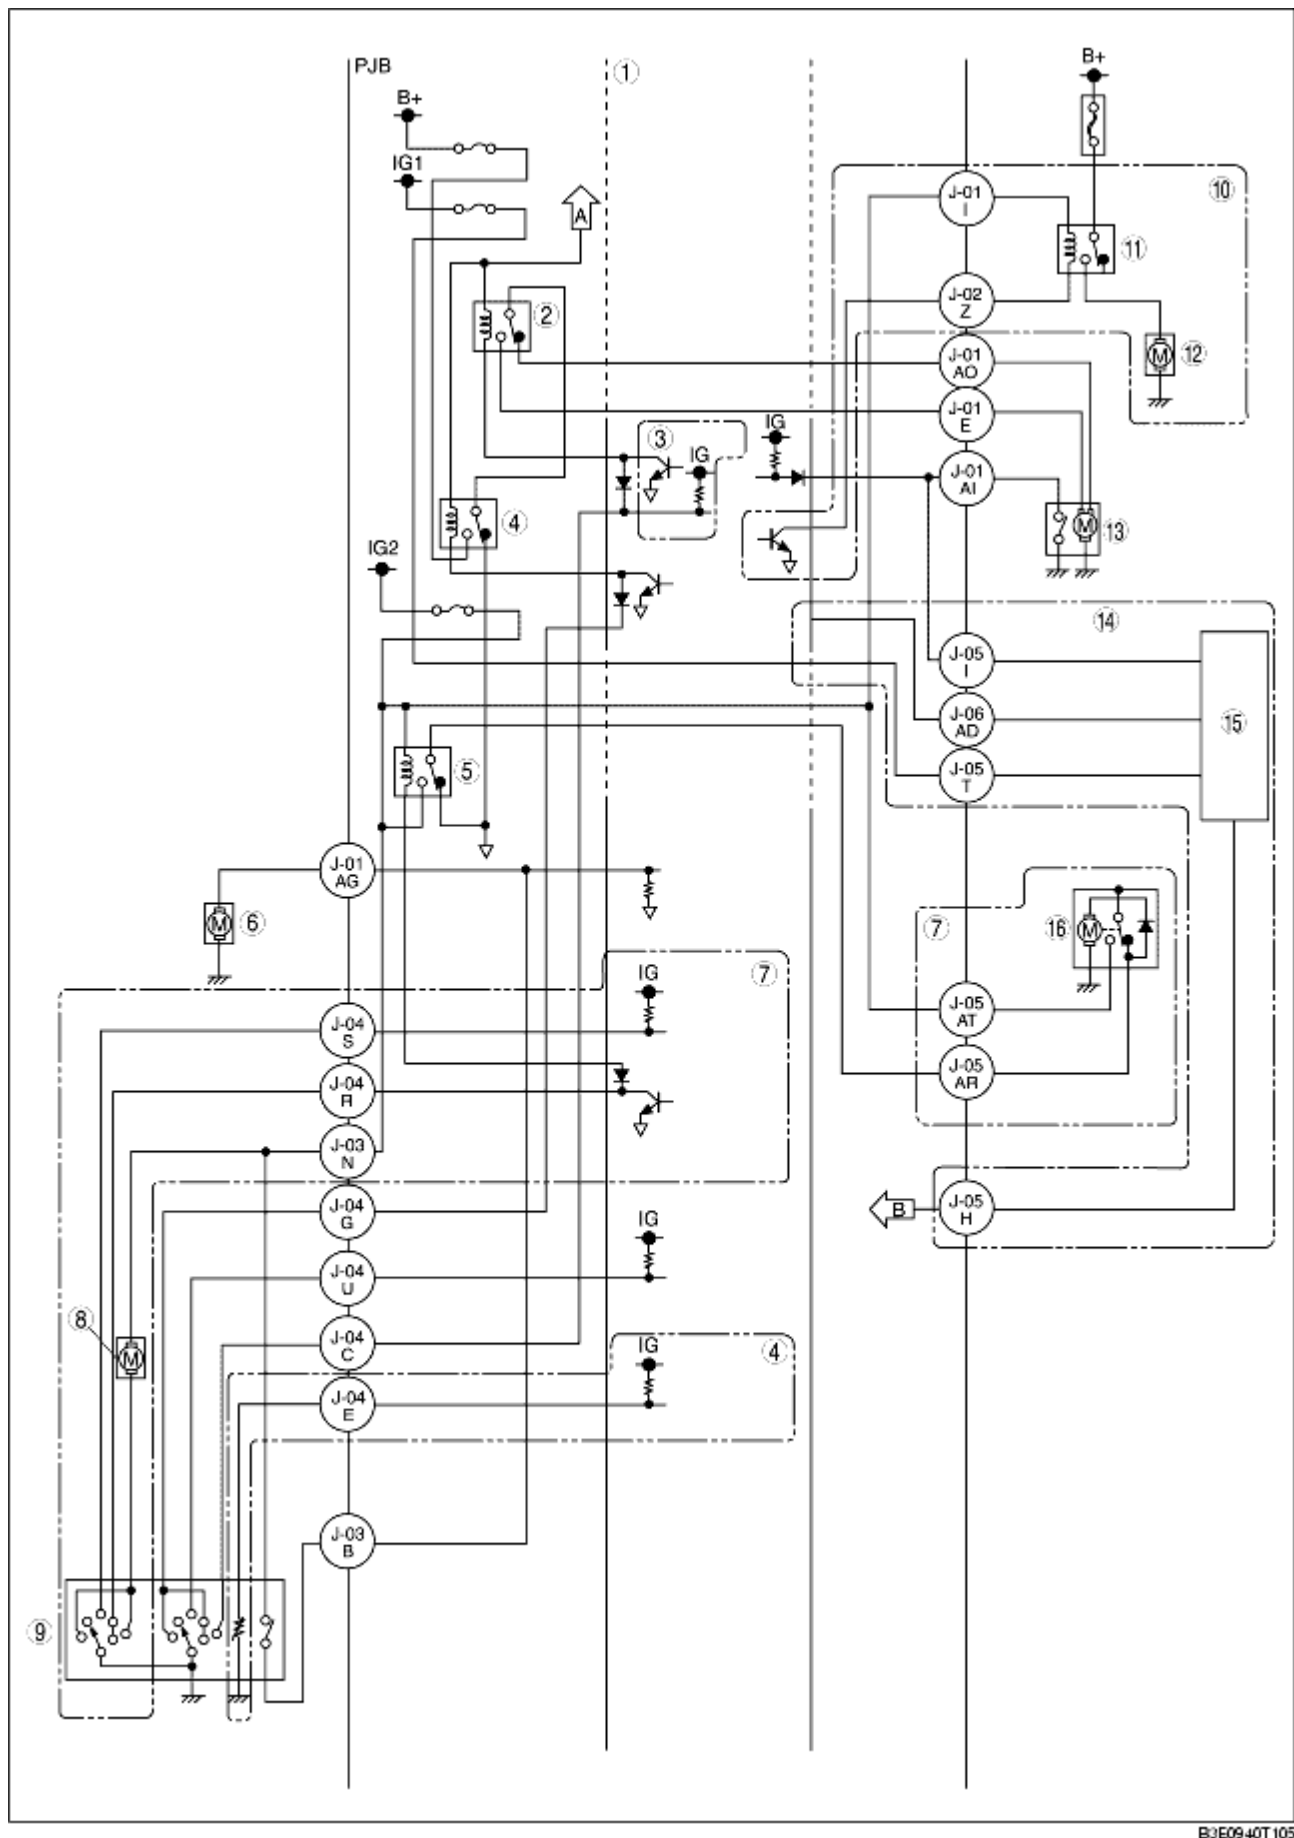


B3E0940T105

1	Microcomputer
2	Windshield wiper HI relay
3	With auto wiper system
4	Windshield wiper relay
5	Rear wiper relay
6	Windshield washer motor
7	With rear wiper system
8	Rear washer motor
9	Windshield wiper and washer switch
10	Headlight cleaner system
11	Headlight cleaner relay
12	Headlight cleaner motor
13	Windshield wiper motor
14	With auto wiper system
15	Rain sensor
16	Rear wiper motor



4	Map light
5	Interior light
6	Driver-side door lock-link switch
7	Trunk lid key cylinder switch
8	Liftgate latch switch
9	Trunk lid latch switch
10	With double lock function
11	Door lock relay
12	Double lock relay
13	Door unlock relay
14	Trunk lid unlock relay
15	Trunk lid unlock actuator
16	For optional parts power supply
17	To car-navigation unit, audio unit
18	Keyless control module
19	Ignition key illumination
20	Door lock actuator (driver-side)
21	Door lock actuator (passenger-side)
22	Door lock actuator (left rear)
23	Door lock actuator (right rear)
24	Liftgate lock actuator

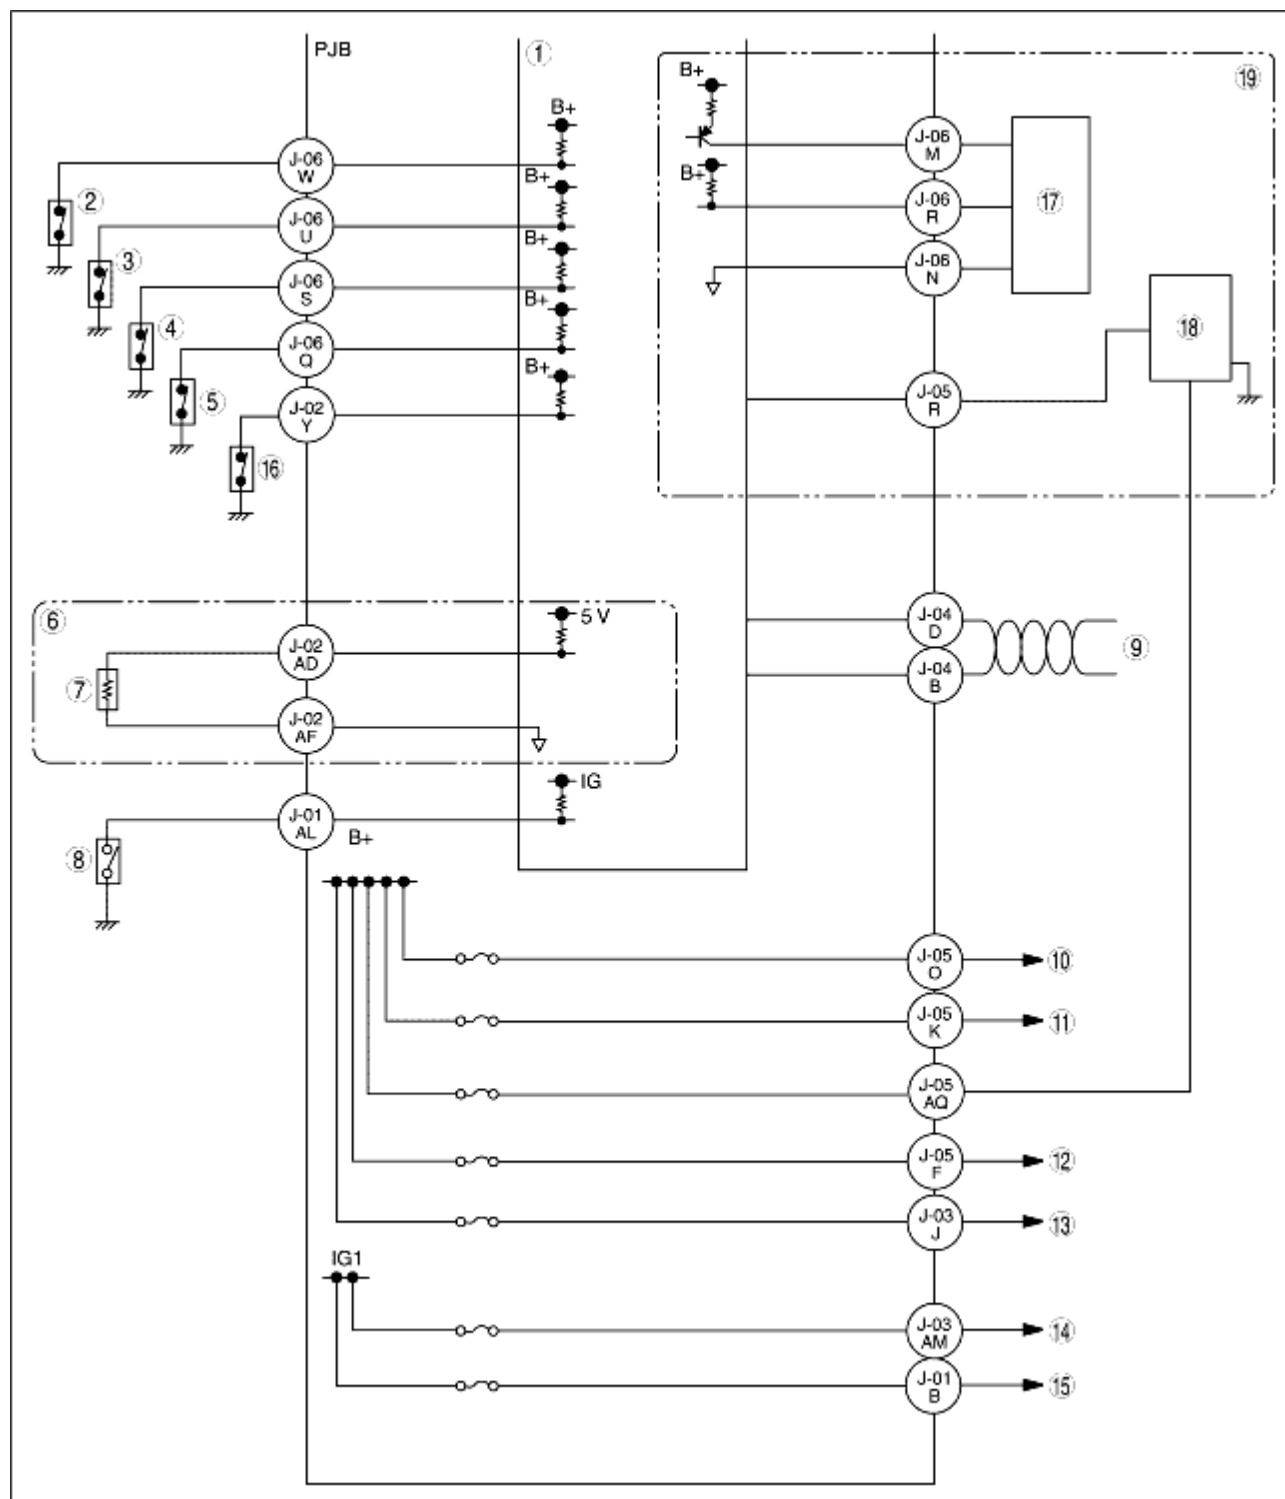

B3 E0940 TJK1

1	Microcomputer
2	Front door latch switch (LH)
3	Front door latch switch (RH)
4	Rear door latch switch (LH)
5	Rear door latch switch (RH)
6	With full-auto air conditioner system
7	Ambient temperature sensor

8	Brake fluid level sensor
9	CAN system-related module (PJB, Climate control unit, SAS control module, Audio unit (base module))
10	To power window subswitch
11	To power window main switch
12	To sunroof
13	To DLC-2
14	To SAS control module
15	To EHPAS control module
16	Bonnet latch switch
17	Intruder sensor
18	Theft-deterrent siren
19	With theft-deterrent system