



## Exterior Rear Door Handle (76.58.02)

### Removal

#### NOTE :

If the exterior handle is to be removed in conjunction with additional door internal items, then it is recommended that the exterior handle and screw cover be released from the inside of the door, after removal of the door trim pad, regulator and motor.

1 .

#### NOTE :


Removal of the screw cover may break the retaining clips.

#### NOTE :

If the screw cover is to be removed in conjunction with additional door internal items, then it is recommended that the screw cover be released from the inside of the door, after removal of the door trim pad, regulator and motor.

Remove the screw cover.

➤ Release the 2 clips.

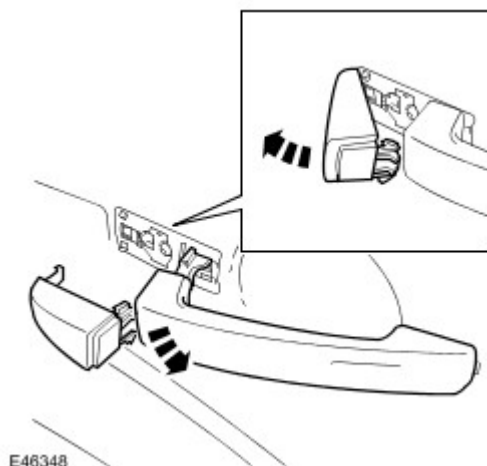


2 .

To remove the exterior rear door handle, without removal of the door trim pad.

➤ Slide the handle firmly rearward, then pivot the handle away from the door to remove it.

➤ Remove the 2 gaskets.

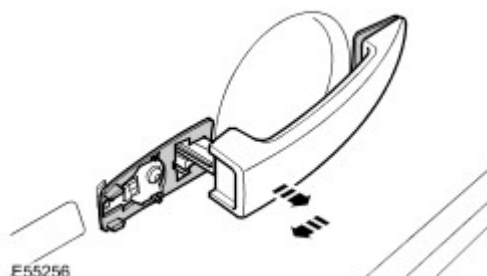


3 .

To remove the exterior rear door handle, after removal of the door trim pad and regulator.

➤ Using a nylon mallet, carefully release the clip.

▶ Remove the 2 gaskets.

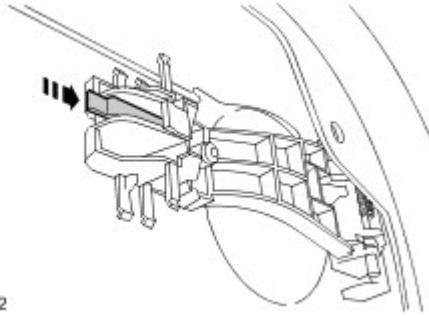

## Installation

1 .

**NOTE :**

Use a length of cord to hold the lock lever against spring pressure while engaging the outside handle.

To install, reverse the removal procedure.

