



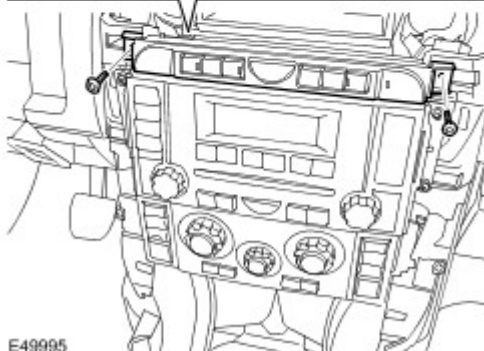

Instrument Panel Console Switch Assembly (86.65.17)

Removal

1. Remove the instrument panel console. For additional information, refer to [Instrument Panel Console \(76.25.03\)](#) (Section 501-12)
2. Remove the instrument panel switch assembly.
 - Remove the 2 Torx screws.
 - Disconnect the electrical connector.

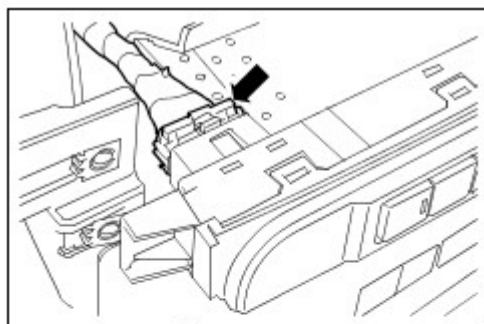

Installation

1. Install the instrument panel switch assembly.
 - Connect the electrical connector.
 - Tighten the Torx screws.
2. Install the instrument panel console. For additional information, refer to [Instrument Panel Console \(76.25.03\)](#) (Section 501-12)