

# CLUTCH PEDAL POSITION (CPP) SWITCH INSPECTION [LF]


B3E014018660W03

## Note

- Before performing the following inspection, make sure to follow the procedure as indicated in the troubleshooting flowchart. (See [Troubleshooting Procedure](#).)

## Continuity Inspection

1. Remove the CPP switch.
2. Verify that the continuity between CPP switch terminals A and B is as indicated in the table.

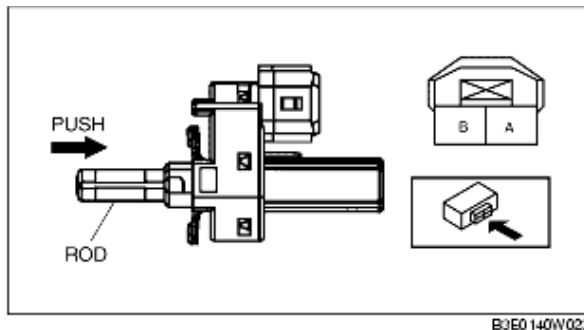

- If there is no malfunction, perform the "Circuit Open/Short Inspection".
- If there is any malfunction, replace the CPP switch.

Measurement condition	Continuity
Push the rod.	Continuity detected
Except above	No continuity

## Circuit Open/Short Inspection

1. Disconnect the PCM connector.
2. Disconnect the CPP switch connector.
3. Inspect the following wiring harnesses for open or short circuit. (Continuity inspection)

### Open circuit

- If there is no continuity in the following wiring harnesses, there is an open circuit. Repair or replace the wiring harness.
  - CPP switch terminal B and PCM terminal 10
  - CPP switch terminal A and body GND

### Short circuit

- If there is continuity in the following wiring harnesses, there is a short circuit. Repair or replace the wiring harness.
  - CPP switch terminal B and body GND
  - CPP switch terminal B and power supply